

Jandy Pro Series Never Lube[®] 2"-2¹/₂" 2 Way PVC Valve Installation Instructions

FOR YOUR SAFETY - This product must be installed and serviced by a contractor who is licensed and qualified in pool equipment by the jurisdiction in which the product will be installed where such state or local requirements exist. The maintainer must be a professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in this manual can be followed exactly. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation will void the warranty.

PLUMBING

One valve is designed for both 2" and $2\frac{1}{2}$ " pipe. **2" pipe** slip fits into valve ports. **2¹/₂**" **pipe** is joined using $2\frac{1}{2}$ " pipe coupler. 45° or 90° fitting. See drawing on this page.

Internal valve assembly must be removed prior to gluing valve body to pipe fittings. Make certain no glue enters valve body beyond ports.


WELD-ON[®] PVC GRAY IS RECOMMENDED.

VALVE HANDLE USE

Lock Knob - Loosen lock knob to turn handle. To secure handle, turn knob down finger tight. See drawing on this page.

Off Indicator - OFF area on indicator represents exact position of internal valve diverter seal.


Handle Stops - Protruding pins located on valve cover will stop diverter in complete port shut-off position. Be sure the word "INLET" on valve cover is over incoming flow port.word "INLET" on valve cover is over the incoming flow port.

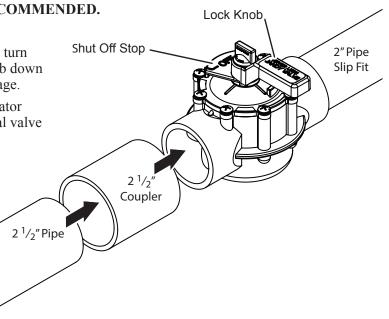

Valve Complete, Positive Seal, 2716


ltem No	Part No	Description	Qty
1	1298	#14 x 3/4" Valve Housing Screw	8
2	R0487000	Knob (ABS) Gray	1
3	R0642300	Valve Handle Never Lube [®] Gray	1
4	R0642100	Valve Cover (2-Port) Gray	1
5	1132	151 O-Ring	1
6	1307	116 O-Ring	2
7	4720	Diverter Assembly Complete (Positive) Never Lube [®]	1

NOTE The valve housing is not available as a separate part. To replace the valve housing, you must replace the entire valve.

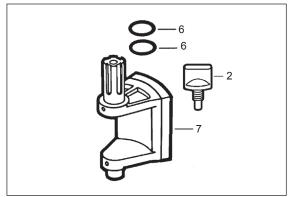

Item #7. Diverter Assembly Complete with Knob

NOTE Item 7 (Part 4720) includes a Pipe Plug P-18, but you can discard it, because you do not need it with this valve.

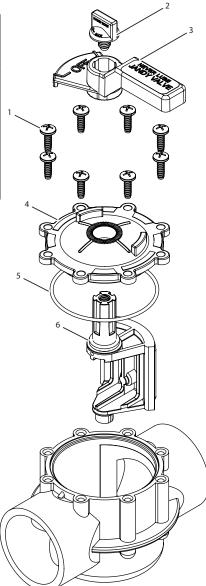

Zodiac Pool Systems, Inc. 2620 Commerce Way, Vista, CA 92081 1.800.822.7933 | www.ZodiacPoolSystems.com

 $\label{eq:zoblaC} \text{ZODIAC}^{\circledast} \text{ is a registered trademark of Zodiac International, S.A.S.U., used under license.} \\ \text{All trademarks referenced herein are the property of their respective owners.} \\$

©2014 Zodiac Pool Systems, Inc. H0500500 Rev A