2 ¹/₂" S / 3" SPG SERVICEABLE SWING CHECK VALVE INSTALLATION INSTRUCTIONS



Straight Body Check Valve (600-0111)

READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS


IMPORTANT: Directional flow of water is essential for proper function. Serviceable Swing Check Valve is designed for both 2 ½" Socket and 3" Spigot pipe.

IMPORTANT: Prior to installation of valve to fittings, remove lid/ valve assembly (#2) to prevent accidental gluing of components.


CAUTION: DO NOT allow any glue into the valve body beyond the pipe stops.

MOUNTING INSTRUCTIONS

The Check Valve can be installed in either horizontal or vertical plumbing. For vertical plumbing, **use only with upward flow**. Follow CORRECT / INCORRECT diagrams below to ensure upward flow.

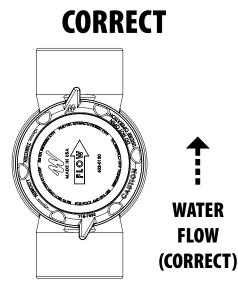

INCORRECT

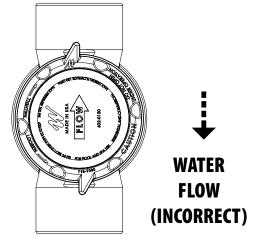




SWING CHECK VALVE LOCATION

• Water flow **MUST** be in the direction of the arrow.

IMPORTANT: Locate the Swing Check Valve at the lowest possible position in the plumbing system. Allow for a minimum of 18" water column. The weight of the water column assists in a greater valve seal and function.

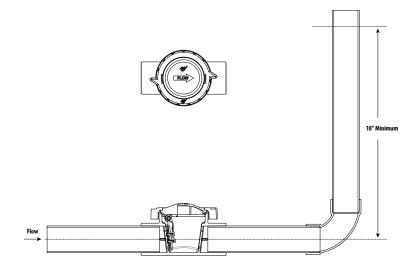



12 12 1 0.8 0.6 0.4 0.2 0.2 0.50 100 150 200 250 Flow Rate (GPM)


MAINTENANCE

The clear cover permits easy inspection of the Swing Check Valve. If necessary, the valve can be disassembled for inspection of the o-ring and valve assembly. Before reassembly, lubricate o-ring thoroughly with appropriate silicone lubricant.

SERVICEABLE SWING CHECK VALVE REPLACEMENT PARTS

#	Part No.	Descr
1	718-7031-CPVC	Threa
2	705-0111	Lid &
3	805-0241	0-Rir
4	602-0121	Body
	810-0270	Instru

- Description Threading Nut Lid & Flapper Assembly O-Ring Body (must purchase complete valve)
- Instruction Sheet

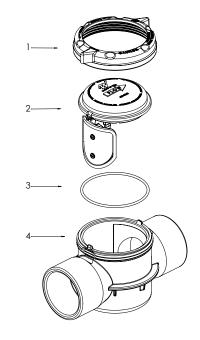

WARRANTY

For product registration visit: www.waterwayplastics.com. For Warranty questions or claims please contact point of purchase.







2200 East Sturgis Road, Oxnard CA 93030 • Phone 805.981.0262 • Fax 805.981.9403 www.waterwayplastics.com • waterway@waterwayplastics.com