


FAST Landing Pads


Recommended for underwater application only.

FAST landing pads work best when completely immersed in water. They are **not recommended** for installation on splash pads or in water less than 2" deep.

1. Mark anchoring positions.
2. Drill ½" holes into pool or deck floor for SS anchors provided.
3. Set SS anchors using the 5/16" setting tool provided by tapping the wedge down until tight.
4. Set pad into position and tighten down using SS washers and screws provided. Tighten screws to 15 inch pounds. Ensure all anchors are installed and tight, but do not over tighten. Over torque screws may crack the backing board.
5. Insert enough silicone (provided) into each countersunk hole in the foam to cover the screw head (see illustration below).
6. Trim the narrow end (bottom) of the foam plugs provided so that they will sit flush in the countersunk holes atop the anchoring screw (see illustration below).
7. Insert trimmed foam plug into each countersunk hole. There should be enough silicone in each hole to hold the plug in place, while making it easy to remove for maintenance purposes.
8. If anchors loosen overtime, remove foam plugs and retighten each anchoring position. A lose landing pad will result in accelerated excessive wear around the anchoring positions. Once the anchors are retightened, repeat steps 5 through 7 above to reinstall the foam plugs.

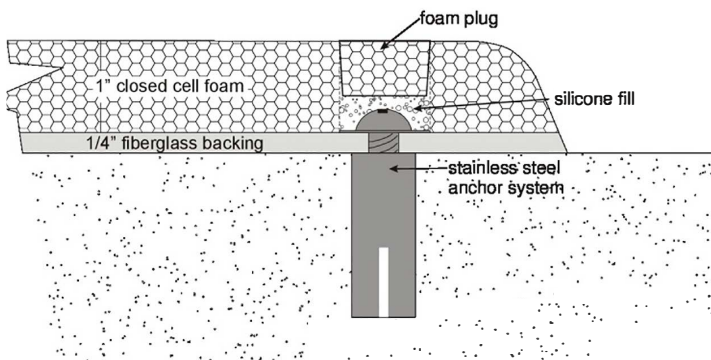

Stainless Steel Anchors included

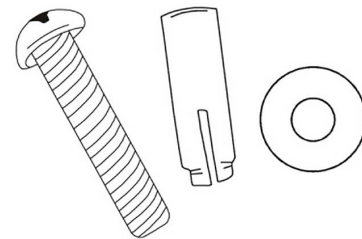

Features

- Stainless steel anchor system
- Fiberglass backing
- Gently rounded edges
- Non-slip surfaces
- Concentric bolt pattern
- Custom sizes available

Foam is made with BIOBLOK™, antimicrobial permanently bound in the product, eliminating fungus, mildew, mold, and bacteria growth.

FAST 
FIBERGLASS
FIBERGLASS - ANIMALS - SCULPTURES - TRADEMARKS

14177 County Highway Q
Sparta, WI 54656

Phone: 608-269-7110
Email: info@fastfiberglass.com
www.fastfiberglass.com